
NEW CANADIAN TAX

INSTALLATION MANUAL

MODEL ER-2595

CONTENTS

- 1. IDENTIFYING THE ER-2595 GST MODEL
AND NON-GST MODEL**
- 2. GST MODIFICATION PROCEDURE**
- 3. SRV MODE PROGRAMMING**
- 4. PGM MODE PROGRAMMING**
- 5. "G" LABEL PLACEMENT**

1. IDENTIFYING THE ER-2595 GST MODEL AND NON-GST MODEL

1-1. IDENTIFYING THE ROM BASED ON THE KEY OPERATION

A) PGM2 mode

- Key entry

959 → **@/FOR** → **CA/AT**

- Printout

	Non-GST model	GST model
Stand alone (ROM1)	1 1.01	1 2.01
Stand alone (ROM2)	—	2 2.01

1-2. IDENTIFYING THE ROM BASED ON THE ID NUMBER ON THE ROM

	Non-GST model	GST model
Stand alone (ROM1)	RBH1A~RBH1E	RCG1A
Stand alone (ROM2)	—	RCG2A
ER-25RM option	RB1J1A~RB1J1B	—


NOTE: The ER-25RM program is included in GST ROM2. Therefore, there is no need the ER-25RM for ER-20RS and ER-20IN option.

1-3. IDENTIFYING THE ROM BASED ON THE SERIAL NUMBER ON THE RATING PLATE

	GST model
For the production	From April, 1991
Range of applicable serial number	19000014 ~

NOTE 1: How to read the serial number

1 9 X X X X X 4

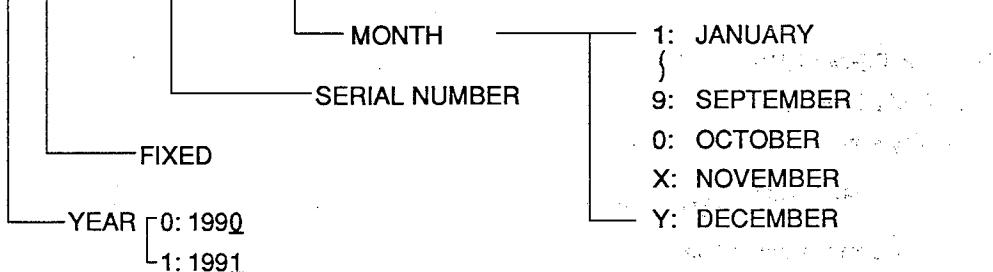

2. GST MODIFICATION PROCEDURE

2-1. BEFORE PROCEEDING WITH INSTALLATION

Check that your GST Kit includes the following:

- 2 EPROM (ROM1: "VHI27512RCG1A", ROM2: "VHI27512RCG2A")
- 2 "G" labels
- 1 "TAX 4 SHIFT" label
- 1 Operational Manual
- 1 "TAX 3 SHIFT" label

WARNING!

All programming and Sales information will be lost due to this modification. Remember to print the SRV/PGM programming information as well as the General Report and any other relevant reports prior to begining this procedure.

2-2. ROM REPLACEMENT PROCEDURE

- 1 - Unplug the machine
- 2 - Remove the top cabinet and then remove the keyboard unit
- 3 - Remove ROM 1 (IC9) from the socket on the main PWB
If the option ROM chip was installed to the ROM2 (IC8), the option ROM must be removed from the socket.
- 4 - Install the GST compatible ROM chips to the IC sockets of ROM1 and ROM2. Note the direction of chips.

ROM ID#) ROM1 : RCG1A
ROM2 : RCG2A

- 5 - Ensure the keyboard connector(s) has been fastened correctly and then replace the keyboard and top cabinet
- 6 - Perform a Master Reset:
 - Disconnect the AC cord from the wall outlet.
 - Turn the Mode Switch to SRV2 (6 o'clock) position.
 - Connect the AC cord to the wall outlet.
 - Press and hold the JOURNAL FEED key and turn the Mode Switch to the SRV1 (7 o'clock) position.

2-3. CONFIRMATION

A) PGM 2 mode

- Key entry :

959 → @/FOR → CA/AT

- The printout should be :

ROM 1 : 1 2. 01
ROM 2 : 2 2. 01

Main PWB layout

B) SRV1 mode (test function)

- Key entry :

ROM 1 : 130 → **CA/AT**

ROM 2 : 400 → **CA/AT**


- The printout should be :

ROM 1 :	0 2 0 1	130 : Normal printout	
	E --	0 2 0 1	130 : Abnormal printout

ROM 2 :	0 2 0 1	400 : Normal printout	
	E --	0 2 0 1	400 : Abnormal printout

Reprogram the ECR using the information that was printed before the modification was done.


2-4. MAIN PWB LAYOUT

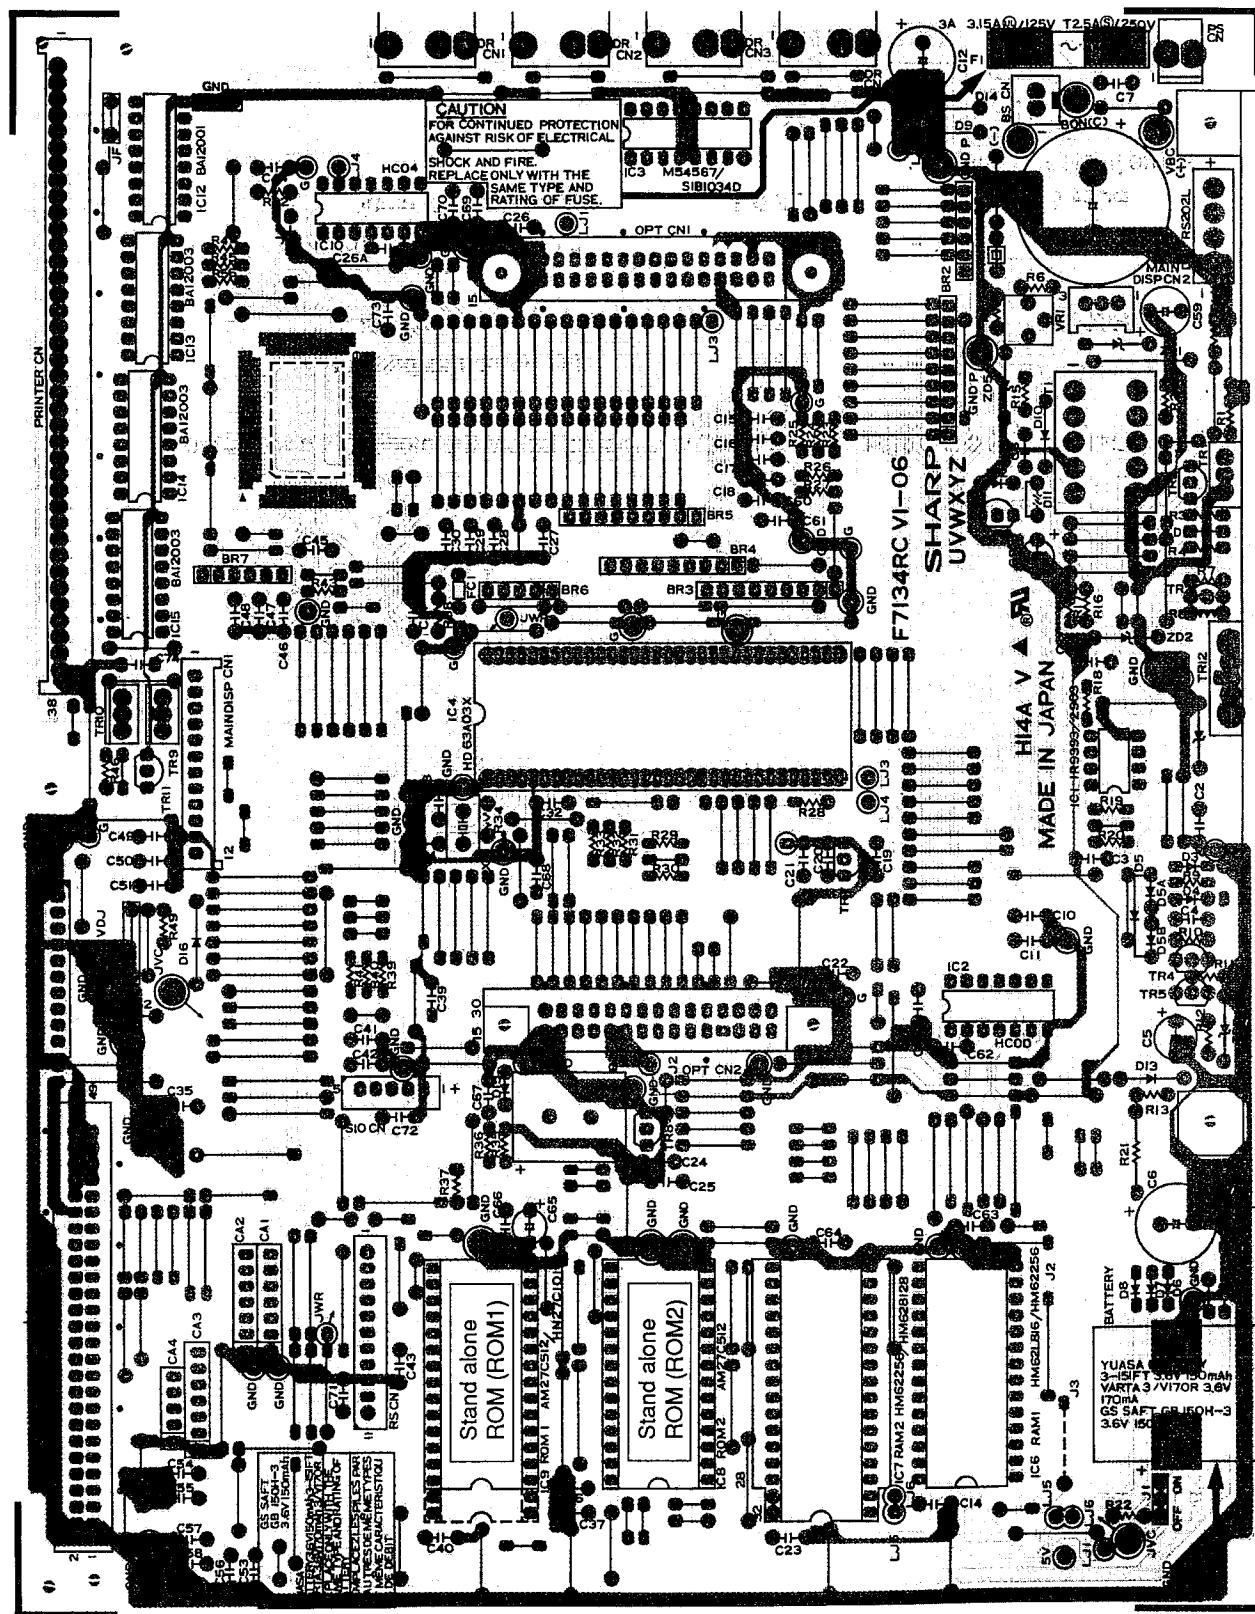

3. SRV MODE PROGRAMMING

(★ mark is MRS setting)

 [JOB#901]: MRS=0022

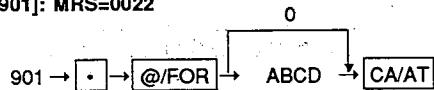

901-A,B = Not used (Fixed at "00")

901-C = Selection of tax mode by country


Tax setting by country	901-C
U.S.A.	0
CANADA	2
SINGAPORE	4

* To be fixed at CANADIAN tax.

901-D = TAB setting

TAB setting	901-D
0	0
0.0	1
0.00	2
0.000	3

 [JOB#905] : MRS=0005

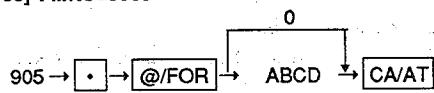

1. Taxable 4 subtotal on X/Z report: Print or Skip.
2. Gross Tax 4 and refund Tax 4 total on X/Z report: Print or Skip
3. Net Tax 4 total on X/Z report: Print or Skip

Taxable 4 subtotal on X/Z report	Gross tax 4 & refund tax 4 total on X/Z report	Net tax 4 total on X/Z report	905-A
Print	Print	Print	0
		Skip	1
	Skip	Print	2
		Skip	3
Skip	Print	Print	4
		Skip	5
	Skip	Print	6
		Skip	7

1. Tax amount printed on receipt when GST is VAT.
2. Tax amount printed when tax amount is "0".

1. GST for VAT	2. Tax amount at "0"	905-B
Print	Print	0
	Skip	1
Skip	Print	2
	Skip	3

905-C = GST EXPT sales is printed on the X/Z reports or skipped.


GST EXPT on the report	905-C
Print	0
Skip	4

905-D = Tax method

	Tax4 method (GST)	Tax3 method		Tax2,1 method (PST)	905-D
		GST	PST		
Type ①	VAT	VAT		Tax on Tax	0
Type ②				Tax on Base	1
Type ③	VAT			Tax on Tax	2
Type ④				Tax on Base	3
Type ⑤	Add on Tax			Tax on Tax	4
Type ⑥				Tax on Base	5
Type ⑦	Add on Tax	VAT		Tax on Tax	6
Type ⑧				Tax on Base	7
Type ⑨	Add on Tax	Add on Tax		Tax on Tax	8
Type ⑩				Tax on Base	9

[JOB#950]: Free key layout programming

- For information to program function keys other than the Tax 4 SHIFT key, please refer to page 34 of the ER-2595 Service Manual (code: 00ZER2595SM-E)

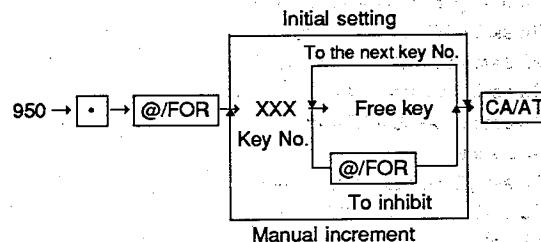

Tax 4 SHIFT key No. = 23


NOTE: "FS SHIFT" key no. is replaced by "TAX4 SHIFT".

4. PGM MODE PROGRAMMING

NOTE: Only when the Canadian tax mode is selected by Job#901-C during SRV mode programming, the following PGM setting becomes effective, except that the food stamp setting becomes invalid.

[JOB#211]: Department MODIFY setting MRS=00000

NOTE: Prevents PST or GST tax overlap.

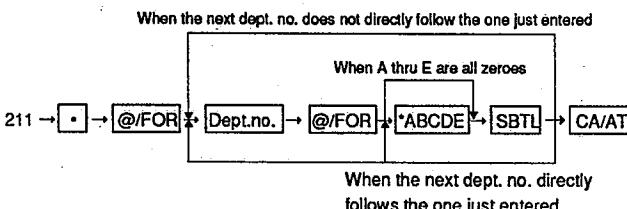

*A: Sign (+/-)

To assign the plus sign, enter 0; and to assign the minus sign, enter 1.

B: Tax 4 status (fixed to the GST)

- To assign "non-taxable," enter 0.
- To assign "taxable 4," enter 1.

C: Tax 3 status (usable for the GST)

- To assign "non-taxable," enter 0.
- To assign "taxable 3," enter 1.

D: Tax 2 status


- To assign "non-taxable," enter 0.
- To assign "taxable 2," enter 1.

E: Tax 1 status

- To assign "non-taxable," enter 0.
- To assign "taxable 1," enter 1.

[JOB#221]: PLU MODIFY setting MRS=00000

NOTE: Prevents PST or GST tax overlap.

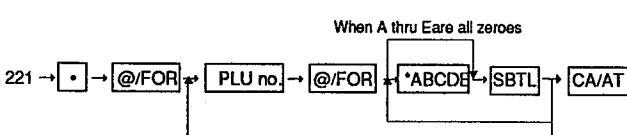

A: Sign (+/-)

To set as a plus PLU, enter 0, and to set as a minus PLU, enter 1.

B: Tax 4 status (fixed to the GST)

- To assign "non-taxable," enter 0.
- To assign "taxable 4," enter 1.

C: Tax 3 status (usable for the GST)

- To assign "non-taxable," enter 0.
- To assign "taxable 3," enter 1.

D: Tax 2 status

- To assign "non-taxable," enter 0.
- To assign "taxable 2," enter 1.


E: Tax 1 status

- To assign "non-taxable," enter 0.
- To assign "taxable 1," enter 1.

[JOB#231]: % key, \ominus key tax setting

MRS=10000

To repeat

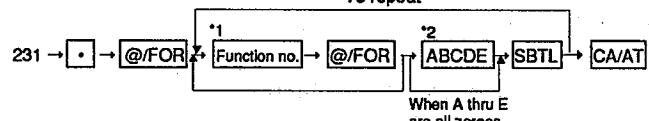

A: Sign (+/-)

To select the + (premium) sign, enter nothing and to select the - (discount) sign, enter 1.

B: Tax 4 status (fixed to the GST)

- To assign "non-taxable," enter 0.
- To assign "taxable 4," enter 1.

C: Tax 3 status (usable for the GST)

- To assign "non-taxable," enter 0.
- To assign "taxable 3," enter 1.

D: Tax 2 status

- To assign "non-taxable," enter 0.
- To assign "taxable 2," enter 1.

E: Tax 1 status

- To assign "non-taxable," enter 0.
- To assign "taxable 1," enter 1.


NOTE: The standard keyboard is not equipped with those keys marked with a (*).

With regard to $\ominus 1$, $\ominus 2$, $\ominus 3$, and $\ominus 4$ keys, the item A cannot be set.

PST'S or GST'S may overlap with each other in the tax status programming.

[JOB#240]: Tax table setting

NOTE: "Tax rate = 0%" is established if the tax table has been programmed with GST for VAT.

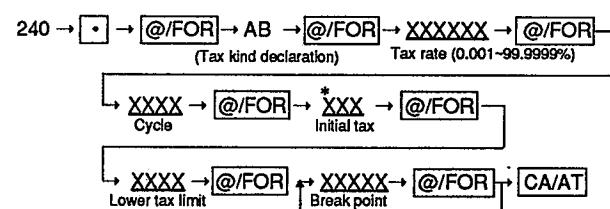

May be programmed to 40 break points.

* It means to delete the tax table if the [SBTL] is pressed in the following timing.

A : Interval between break points is 1 dollar or more = 1
Interval between break points is below 1 dollar = 0

B : TABLE 1 PROGRAMMING = 1

TABLE 2 PROGRAMMING = 2

TABLE 3 PROGRAMMING = 3

TABLE 4 PROGRAMMING = 4

TAX RATE = 0.0001~99.9999%

CYCLE = 0.01~99.99

INITIAL TAX = 0.01~9.99

LOWEST TAX AMOUNT = 0.01~99.99

 
BREAK POINT = 0.01~999.99

If interval is more than a dollar, a maximum 20 break points may be set.

If interval is not more than a dollar, a maximum 40 break points may be set.

[JOB#241]: Tax rate setting

NOTE: Lower tax limitation setting is disregarded if GST is VAT.

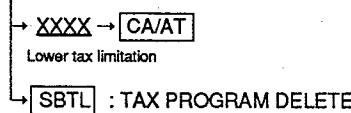


A : TABLE 1 PROGRAMMING	= 1
TABLE 2 PROGRAMMING	= 2
TABLE 3 PROGRAMMING	= 3
TABLE 4 PROGRAMMING	= 4
% TAX RATE	= 0.0000~99.9999%
LOWER TAX LIMITATION	= 0.01~99.99

NOTE: When the tax table or tax rate is set, no decimal point key is required.

[JOB#260] Media key programming - 1

 MRS=000000

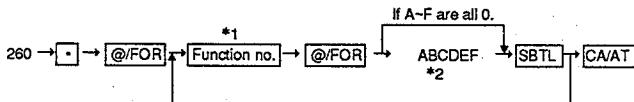

Function No.	Function	A	B	C	D	E	F
48	CA1	O	X	O	O	O	O
49	CA2	O	X	O	O	O	O
63	CHK	O	O	O	O	O	O
58	CH1	O	O	O	O	O	O
59	CH2	O	O	O	O	O	O
60	CH3	O	O	O	O	O	O
61	CH4	O	O	O	O	O	O
62	CH5	O	O	O	O	O	O

* Noted with a circle "O" is a programmable item.

*2 A : Automatic markdown for gasoline

To select automatic markdown, enter 1
To select automatic markdown, enter 0

B : Non-add code compulsory

To select compulsory non-add code entry, enter 1
To select optional non-add code entry, enter 0

C : Change enable

To select change disable, enter 1
To select change enable, enter 0

D : Validation print compulsory

To select compulsory validation, enter 1
To select optional validation, enter 0

E : Drawer open

 
To have the drawer remain closed, enter 1
To have the drawer open, enter 0

F : Compulsory amount tendering

To select compulsory amount tendering, enter 1
To select optional amount tendering for CA/AT, CA2 or CHK key; and to inhibit amount tendering for CH1 thru CH5 keys, enter 0.

[JOB#269] Media key programming - 2

MRS=0000

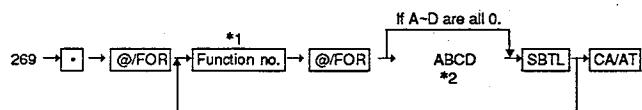

Function No.	Function	A	B	C	D
48	CA1	O	O	O	O
49	CA2	O	O	O	O
63	CHK	O	O	O	O
58	CH1	O	O	O	O
59	CH2	O	O	O	O
60	CH3	O	O	O	O
61	CH4	O	O	O	O
62	CH5	O	O	O	O

* Noted with a circle "O" is a programmable item.

*2 A : Tax 4 calculation status

To delete tax 4, enter 1
To calculate tax 4, enter 0

B : Tax 3 calculation status

To delete tax 3, enter 1
To calculate tax 3, enter 0

C : Tax 2 calculation status

To delete tax 2, enter 1
To calculate tax 2, enter 0

D : Tax 1 calculation status


To delete tax 1, enter 1
To calculate tax 1, enter 0

For details of PGM programming, refer to the instruction manual.


5. GST LABEL PLACEMENT

Place the 2 enclosed "G" labels on the cash register as shown here.

MODEL BADGE

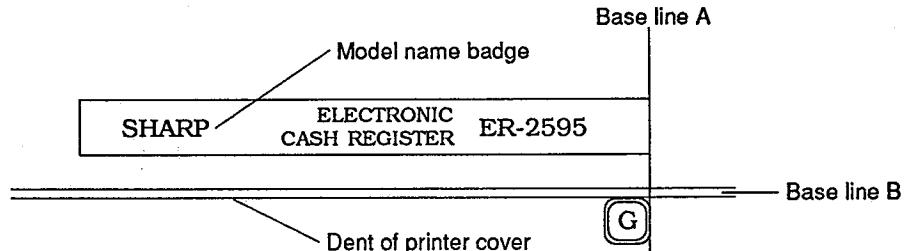


RATING PLATE

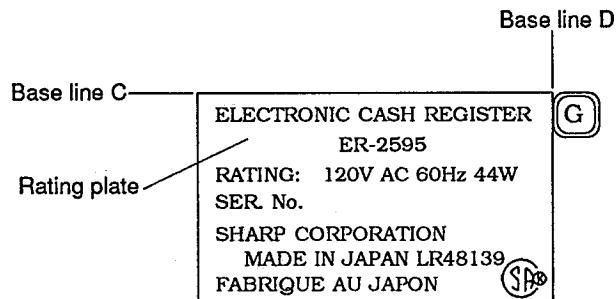

NOTE: Align and affix "G" label to the baselines of the model badge and rating plate as shown.

Mark carton with "G" as shown if kit is installed in stock machine.

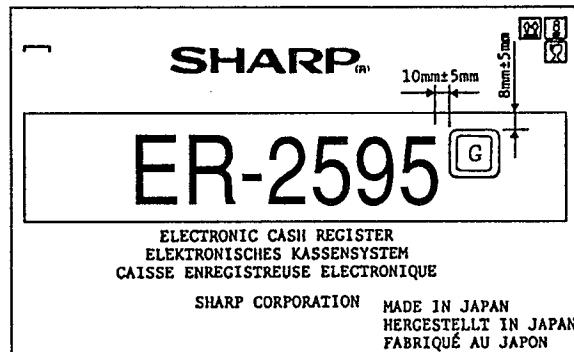

SHARP

COPYRIGHT © 1991 BY SHARP CORPORATION

All rights reserved.

Printed in Japan.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted,
in any form or by any means,
electronic, mechanical, photocopying, recording, or otherwise,
without prior written permission of the publisher.

SHARP CORPORATION
Information Systems Group
Quality & Reliability Control Center
Yamatokoriyama, Nara 639-11, Japan
Apr. 1991 Printed in Japan (B)